



# Typical Structure Abutment

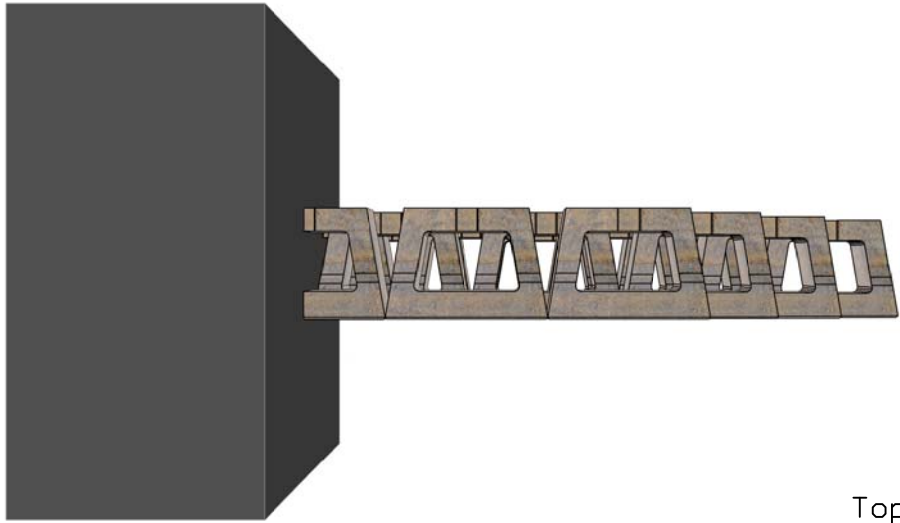

Top View

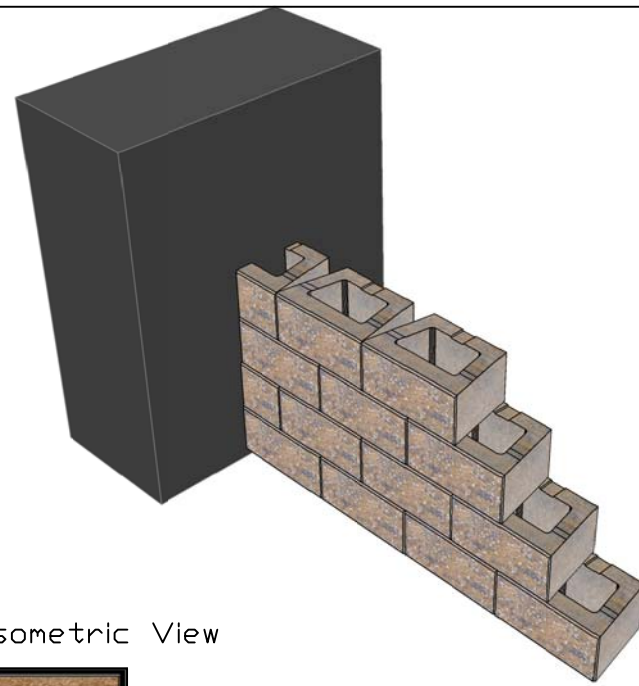


SE Isometric View



Front View

Side View

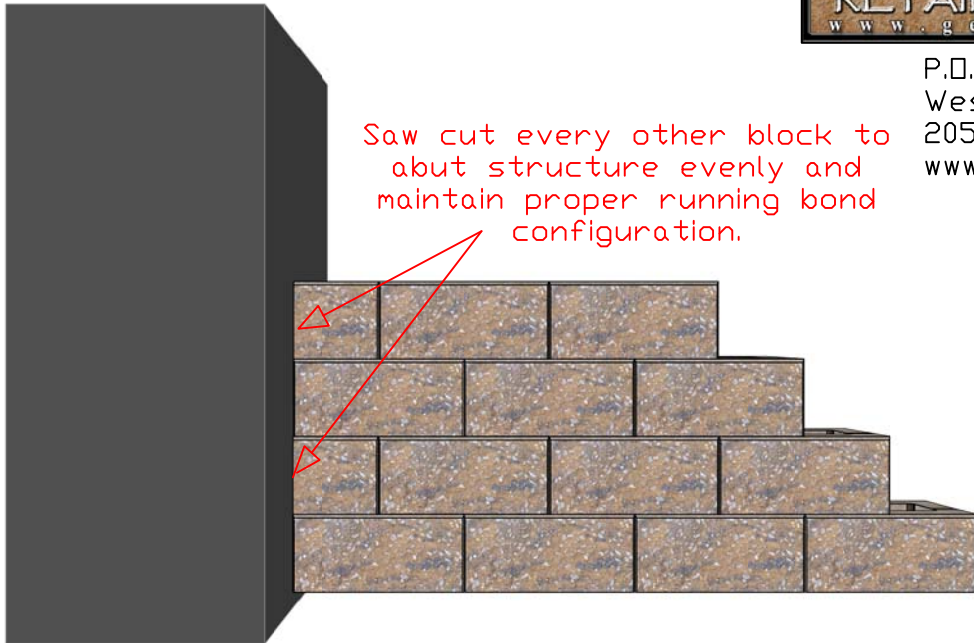

Saw cut every other block to abut structure evenly and maintain proper running bond configuration.

P.O. Box 325  
Westover, AL 35185  
205-678-9969  
www.geostone.com



Shown: Wall abutting structure. Typical wall batter maintained.

Note: Wall may be built vertical to match structure if needed. A batter can be gradually added along length of wall for added strength.