


### Base Leveling Pad (Footing):

- Use compacted Crushed Stone - Preferably #8910
- Footing should be no less than 6" Deep
- Footing Trench should be 2x Length of Block (face - Tall)
- Depth of Embedment of block will depend on wall height, surcharge, soil conditions, and slope.

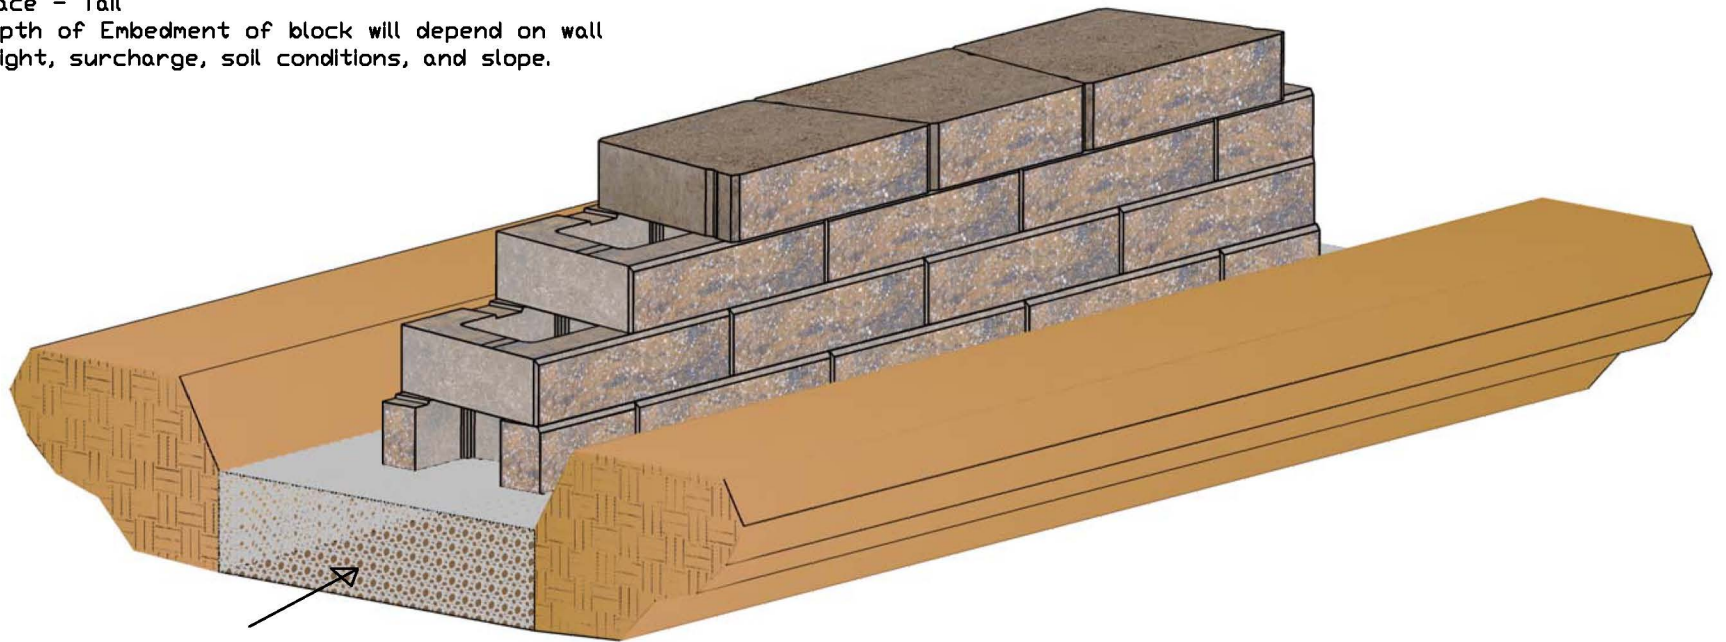

6' Compacted Footing Rock